



ESCAPE 4 PLUS & ESCAPE 6 PLUS

TENT INSTRUCTIONS

- Select a dry level area and clear the ground of any sharp or dangerous objects.
- Spread out the floor of the inner tent. The corners that have 2 pins are the front of the tent. Peg out the four corners ensuring that the tent is pulled out firm and square (*be careful not to make it too taut*). Peg out the remaining pegging points.
- Assemble all the fibreglass poles, making sure that the poles are pushed fully into the ferrules.
- Slide the longer fibreglass poles through the diagonal sleeve and loop at the top of the inner tent. Adjust the poles so that they lie evenly over each corner of the tent.
- Insert the pin (on the tent corner) into the end of one pole, bend pole over and insert the pin in the other pole end. Repeat for the second long pole (this is easiest done by one person lifting the poles and the middle of the tent while another places the pole ends over the pins). Take care not to bend the poles beyond their normal arc.
- Attach the clips on the inner tent to the fibreglass poles.
- Slide the shorter fibreglass vestibule pole through the pole sleeves and web loops that are located in the front of the inner tent, insert the pins into the ends of the fibreglass pole
- Position the fly over the tent and align it. Before pegging down, attach Velcro tabs on the inside of tent fly to poles. (Don't forget the tabs that attach to the vestibule pole at the bent ferrules.)
- With the doors closed peg out the fly ensuring that there is an adequate gap left between the tent and the fly. It easiest to peg the 4 corners then the vestibule and then the rest of the pegs. (Take care not to peg the fly too far out from the base as you may distort the shape of the tent)
- Peg out the guy ropes.

*****REVERSE THESE PROCEDURES TO LOWER THE TENT*****

PACKING INSTRUCTIONS

1. Make sure the inner tent and fly are COMPLETELY DRY and CLEAN before packing away. (A damp tent can develop mildew very quickly.)
2. Pack the poles and pegs into their separate bags.
3. Fold the fly in half lengthwise and fold the ends in to form a rectangle. Then fold each end into the middle and continue folding until you have a long rectangle approx 60-70cm wide and 250cm long. The bottom of the fly should be at one end when folded.
4. Fold the inner tent into quarters lengthwise by folding both sides into the centre, then one half over the other.
5. Lay the fly and poles on top of the inner and tightly roll up the tent over the poles (rolling towards the bottom edge of the fly which helps to push the air out).
6. Secure the rolled up tent with the supplied ties.
7. Place in carry bag.



CARE INSTRUCTIONS FOR YOUR TENT

- **KEEP ALL HEAT AND FLAME SOURCES AWAY FROM TENT,**
NEVER use any gas, flame or heat appliances inside your tent.
- The pre-tied guy ropes must be used at all times to help stabilize and help prevent any damage to your tent (your tent is not covered under warranty from wind and/or storm damage).
- Your tent must be stored away DRY and CLEAN; it also must be kept in a dry area off the ground to help prevent any moisture build-up and/or mildew developing.
- When erecting your tent, try to maintain the gap between your fly and the inner of your tent. This will increase ventilation within the tent and help reduce condensation build-up.
- An Outdoor Connection Durarig tarpaulin or Duramesh mesh tarp on the ground under your tent will help protect the floor and keep it clean.
- Where possible, erect your tent under a tarpaulin to help protect from the elements.
- At the first sign of bird droppings or sap from a tree, clean off straight away using water and a soft cloth only; if left, this may damage the fabric of your fly.
- DO NOT use cleaning agents, bleaches or sharp instruments to clean your tent; this may not only affect the waterproofing treatment of the fabric, you may also accidentally damage the tent which would NOT be covered under the warranty. If soap is needed use only a small amount of pure soap.
- When dismantling the tent, take the extra time to wipe down the awning and fibreglass poles along with your pegs. This will help keep them all free of dirt and debris and help extend their usage.
- If not regularly used, erect the tent every 3 months, this will help in the detection of any mould or mildew that may have been previously undetected (if accidentally put away damp, or has had moisture build-up whilst stored), or any damage that may have been unsighted when last used.
- If the tent has been used near the sea hose down the entire tent to remove salt spray residue (particularly zip slides and any metal parts) and dry thoroughly before storing.

3 YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This product is guaranteed by Outdoor Connection to be free of faults in material or workmanship for a period of three years from the purchase date. The product may be repaired or replaced if it is found to be defective within the warranty period. If the product is no longer available and cannot be repaired it will be replaced with one of an equal or greater value. The guarantee is valid only to the original purchaser **on presentation of the original purchase receipt**. Any claim, including the return of the defective merchandise, should be made to the retailer from whom the goods were purchased. Any expenses in returning the goods to the retailer shall borne by the purchaser. The guarantee **does not** cover the normal wear and tear of parts nor exposure to the weather. Misuse of or negligent use of the product or any alteration or repair other than by Outdoor Connection or its agents will void this warranty.

Outdoor Connection, PO Box 506, Sumner Park Qld 4074, sales@outdoorconnection.com.au

Outdoor Connection NZ, 17 Grasslands Pl, Frankton, Hamilton 3204 New Zealand, info@outdoornz.co.nz