

 **OZTENT**®

**OWNER'S
MANUAL**

WARNING

Never use any fuel-burning products (stoves, lanterns, heaters, etc.) inside or within proximity of the Tent. Use of fuel-burning products inside or within proximity of the Tent can result in the accumulation of dangerous concentrations of carbon monoxide – a colourless, odourless and tasteless gas that is slightly denser than air. Breathing carbon monoxide could cause serious injury or death.

Keep all flame and heat sources away from this Tent. This Tent is made with flame resistant fabric but it is not fireproof. The Tent fabric will burn if left in continuous contact with an open flame or other heat source. Failure to keep all flame and heat sources away from this Tent may result in a fire that could cause serious injury or death.

Before using this product, read and fully understand: (1) attached warnings; (2) the Owner's Manual and all accompanying documentation. Failure to follow these directions could cause an unsafe situation leading to fire, burns, severe injury, or death.

USING AND CARING

RAIN PROTECTION

Use the included fly in heavy rain. The Tent is light shower proof without the fly but fully water proof only with the fly installed.

VENTILATION

Maintain adequate ventilation inside the Tent at all times.

CAMPSITE CHOICE

When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards, to reduce the risk of loss or injury.

Select a site that's level, well drained, and is protected from the wind and other elements. Clear the campsite of sharp stones, sticks, and other debris, both for comfort and to protect the floor of the Tent. If possible, avoid setting the Tent on ground that is already wet. If this is not possible keep the Tent well ventilated to minimize humidity and condensation within the Tent.

PEGS AND ROPES

Peg down the Tent properly at all times to reduce the risk of loss or injury to Tent users.

All Tents require pegging to prevent them from being blown away in strong winds. Always anchor the Tent. Tent pegs and ropes are supplied to safely setup the Tent in most situations. It may be necessary to purchase additional and/or specialized pegs and ropes for use in extreme or varied soil conditions. Maintain adequate ventilation inside the Tent at all times.

Tightly tensioning the Tent with attached ropes greatly increases the Tent's strength and stability. This will also reduce fabric sagging and wrinkles and prevent rainwater from pooling.

USING A FLOOR SAVER

A Floor Saver keeps the Tent floor clean and dry and it minimises floor wear and tear by protecting it from excessive abrasion.

CONDENSATION

When warm, moist air comes in contact with the cool tent fabric condensation can form. In most situations condensation can be controlled by allowing air inside the Tent to vent outside. During periods of high humidity, such as during rain storms, it may be difficult to prevent or reduce condensation. In these situations ventilation could actually increase the condensation by drawing in more humid air.

To reduce condensation use the included Tent Fly. The Tent Fly is designed to reduce the temperature difference between the inside and outside of the Tent. It is normal to find the underside of the fly covered in water droplets in humid conditions.

Condensation can also collect on parts of the floor inside the Tent. This is also normal and does not indicate leaking fabric.

ZIPPERS

Be careful when using Tent zippers. Go slow when zipping. Make sure to align the zipper tracks before sliding the zipper and don't exert excessive force on the zipper. If fabric gets caught in the zipper, stop and slowly reverse the zipper to remove. A silicone based lubricant may be used to improve zipping.

When dirt gets in the zipper teeth, it can cause abrasion and damage to the zipper sliders. You can clean the zipper teeth by rinsing them with water. The pressure from a regular garden hose will push out small sand particles.

CLEANING

If the Tent should require cleaning, set it up and use a sponge with warm water to clean. If further cleaning is required, a garden hose can be used to wash off any remaining dirt. Do not use detergent, soap, bleach, or have the Tent dry cleaned, as this may remove the waterproofing and/or damage the fabric. Allow the Tent to air-dry completely before packing or storing.

STORAGE

Packing and storing the Tent while it's wet or damp leads to premature breakdown of the canvas and coatings. Prolonged exposure to moisture causes the waterproof layer to break down, becoming soft, sticky and no longer waterproof. Storing a wet Tent can cause mildew to form on the fabric. Mildew will cause the Tent to stain, smell, and may lead to the premature breakdown of the waterproof coating. Dry the Tent thoroughly after every trip.

ANIMALS


To prevent damage from animals chewing holes in the Tent fabric, never store food or cooking equipment in the Tent.

SETTING UP THE OZTENT OXLEY


PHASE

1

Unpack the Tent and undo the retaining straps. The number of straps may vary depending on Tent size. Do not discard these straps - you will need them for pack up.

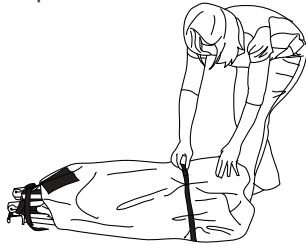

Stand up the Tent. Undo the attached strap restraining the frame (A). Release the folded frame by pulling away the attached nylon loops (B).

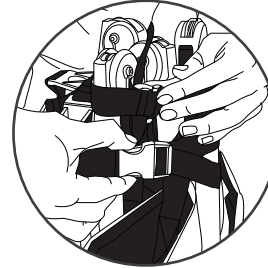

A




B

Allow the frame to unfold itself onto the ground.



Pull all legs out as far as you can and peg them in place.

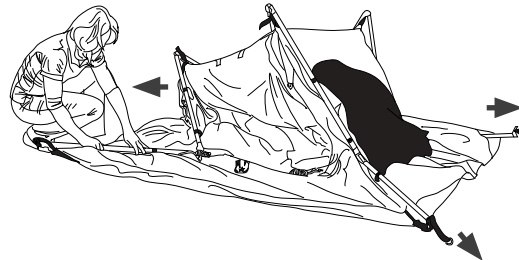


SETTING UP THE OZTENT OXLEY



PHASE

2

Push up the center hub to lock in the roof of the Tent. Lower the locked roof back down gently.

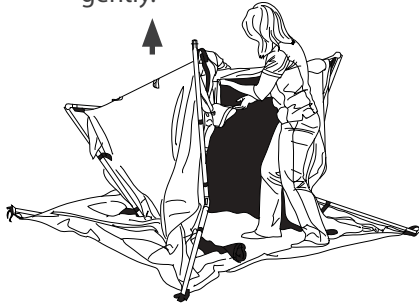


Pull all the arms out from the knuckles to lock the frame into place. You may need to push the Tent up a little to lock in the last knuckle.

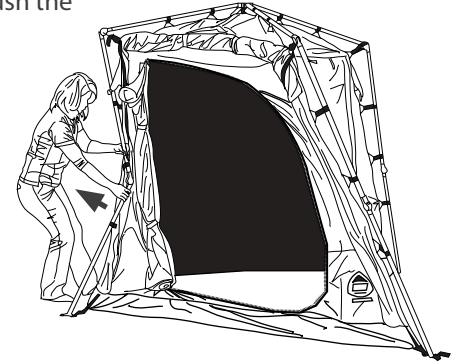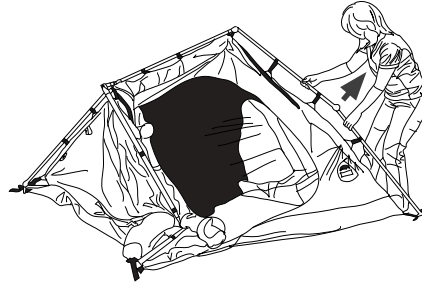

PHASE

3


Peg out all ropes and peg points.

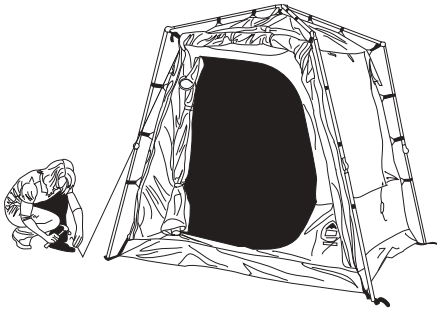

OPTION

A


Release the front awning and use the included Awning Poles and ropes to set it up.

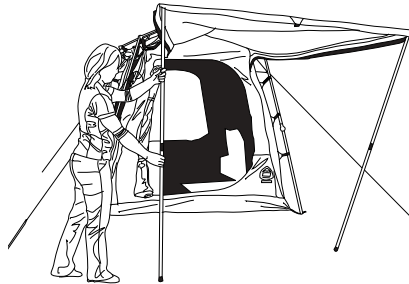

OPTION

B

Throw the fly over the Tent and secure all plastic clips at the bottom. Secure Velcro straps after fitting.

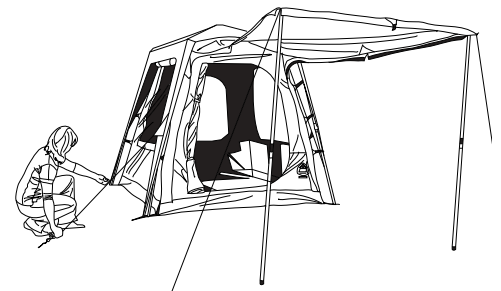


SETTING UP THE OZTENT OXLEY



PHASE

4

Follow phase 1 to 3 for setting up the Tent. Pull out the excess canvas at the back of the Tent and peg at the bottom.

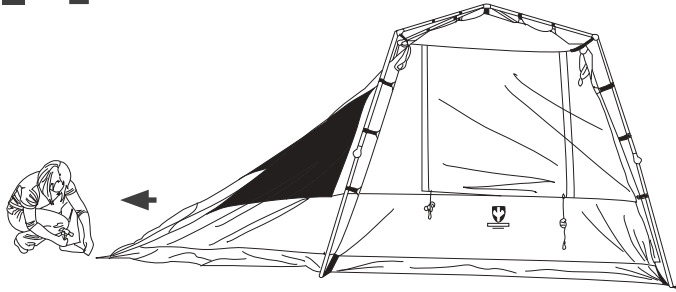

Assemble the Extension Pole. Feed the Extension Pole gently through the sleeve at the back of the Tent. Allow the pole to rotate freely for an easier feed.

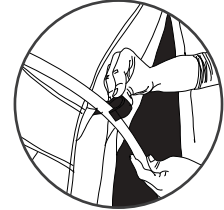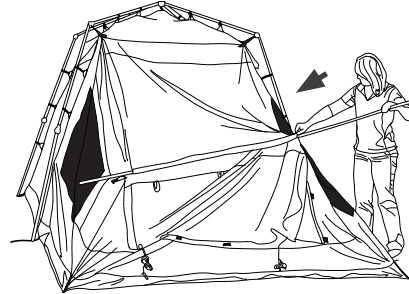


Attach the plastic clips to keep the pole in place.

PHASE


5

Tuck the extension pole in place as shown.

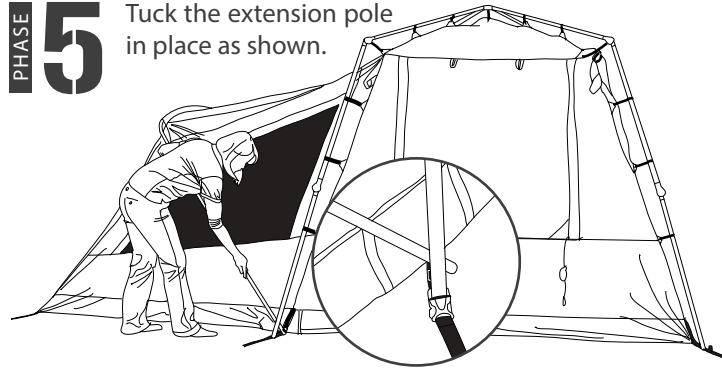


SETTING UP THE OZTENT OXLEY ACCESSORIES


Fully set up the Tent. Use the Peaking Poles included (if applicable) to peak up the Tent as illustrated.

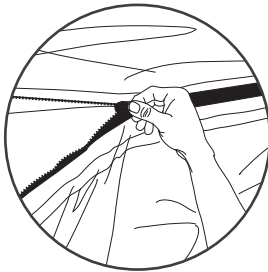

Carefully zip on the panels.

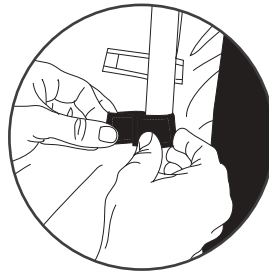

Fix the panels to the awning poles with the attached Velcro straps.

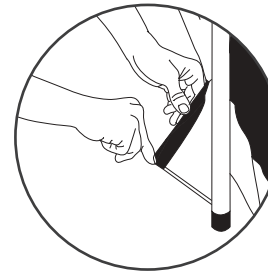

Peg down at all pegging loops.


TAKING DOWN THE OZTENT OXLEY

Note: Before packing the main Tent, detach and pack the Fly and all other accessories. Unpeg and secure all guy ropes and pegs. If you have an extended model take down the extension and pack it inside the main Tent.

PHASE

1

Close all windows. Roll up and secure the attaching awning. Pull down the center hub of the handle attached inside.

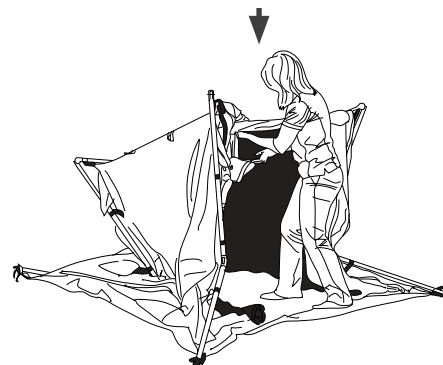


PHASE

2

Unpeg all legs and fold them up to the centre as shown



A

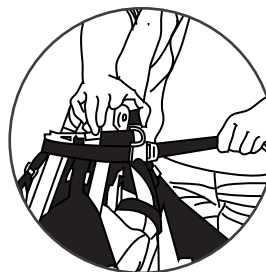

B

Restrain the frame with the attached looped straps (A) and restraining strap (B).

The folded Tent should look similar to this illustration.




TAKING DOWN THE OZTENT OXLEY

PHASE

3

Gently put down the Tent. Roll it up as tight as possible. Restrain with provided retaining straps.

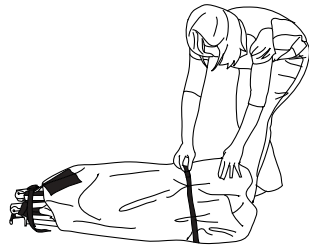

For an easier pack up, release all buckles to loosen the carry bag. Put the carry bag over the rolled Tent. Flip over to zip up.





Oztent Australia Pty Limited
service@oztent.com | www.oztent.com