

# KICKASS



## QUICKFIRE PORTABLE INDUCTION COOKTOP

## KAINDCOOK

# TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION .....	1
SPECIFICATIONS .....	3
WHAT'S INCLUDED .....	4
PRODUCT FEATURES .....	5
PRODUCT OVERVIEW .....	5
UNDERSTANDING YOUR COOKTOP .....	6
USING THE INDUCTION COOKTOP .....	7
CLEANING INSTRUCTIONS .....	10
COMPATIBLE COOKWARE .....	10
TROUBLESHOOTING .....	11
WARRANTY & SUPPORT INFORMATION .....	11

## IMPORTANT SAFETY INFORMATION

- This cooktop is not to be used by anyone with reduced physical, sensory, or mental capabilities.
- This cooktop is not to be used by children, and they should NEVER be left unsupervised around the device. Playing with the device could cause serious injury.
- People with heart pacemakers should consult a doctor prior to operating this product. The magnetic field generated by this product can interfere with heart pacemakers. Only use the appliance after confirming that it does not affect the pacemaker.
- Switch off and disconnect the cooktop from the power supply before cleaning. Failure to do so may result in electric shock or death.
- Never leave the cooktop unattended while in use.
- Do not attempt to alter or modify this cooktop.
- Do not allow pets near the cooktop.
- Do not use this cooktop as heater.
- This cooktop must be repaired by a qualified and licensed technician.
- Do not cook using plastic or aluminum cookware products.
- Metallic objects such as forks, knives or spatulas should not be placed on the surface of the cooktop as they can get very hot.
- The cooktop will not heat up unless it senses that there is a pot or pan on the heating area. For this reason, we recommend not switching on the cooktop until a pot or pan is in place.


- Do not use this cooktop to warm up plates.
- If the power cord / cable is damaged, it must be replaced by the manufacturer, a service agent, or a licensed technician.
- Do not place anything heavier than 10kgs on the cooktop.
- Switch off all controls when not in use and allow the surface to cool down before cleaning.
- Do not connect, operate, or disconnect this cooktop with wet hands.
- Incorrect use can result in damage to the appliance, injury, or death. We assume no liability for misuse of the cooktop or noncompliance with the above instructions.



## **WARNING**

- If the surface of this cooktop cracks, switch off the appliance immediately to avoid the possibility of electric shock, and contact customer support.
- This cooktop complies with all Australian mandated safety regulations. However, to minimise the risk of burns, we strongly recommend that anyone using this cooktop does so with great care. The surface will become extremely hot during use, and will retain heat afterwards.

# SPECIFICATIONS

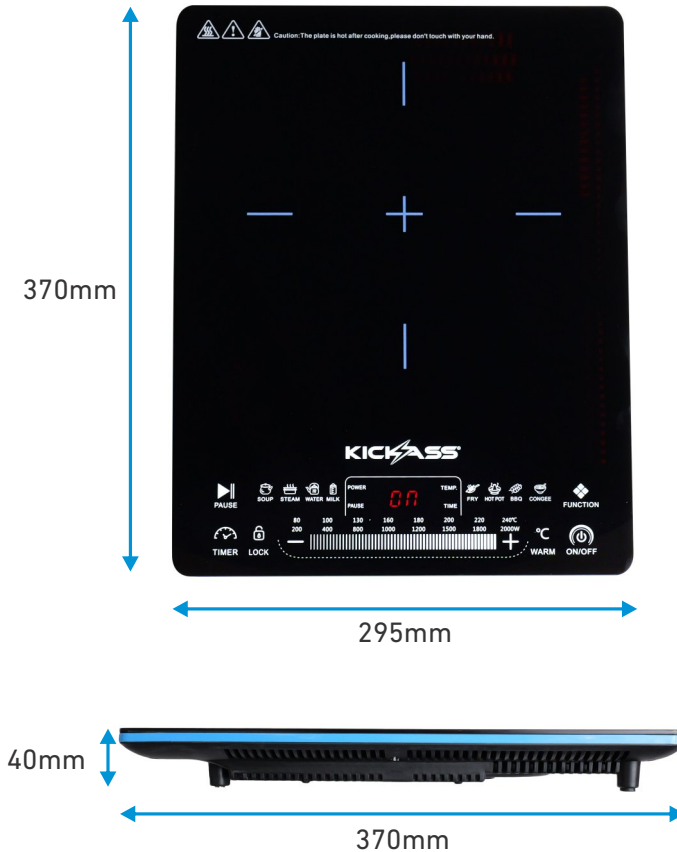

<b>PRODUCT DIMENSIONS</b>	37cm L x 29.5cm W x 4cm H
<b>AC CORD LENGTH</b>	140cm
<b>WEIGHT</b>	2kg
<b>INPUT VOLTAGE</b>	220-240V AC, 50/60Hz
<b>OUTPUT</b>	200W to 2000W
<b>COOKTOP SURFACE</b>	Laminated Ceramic Glass


## WHAT'S INCLUDED



QUICKFIRE INDUCTION COOKER



CARRY BAG

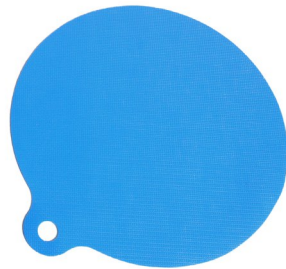


NON-SLIP  
SILICONE MAT

## PRODUCT FEATURES

- Laminated ceramic glass cooking surface
- Capacitive sensor touch buttons
- Auto cookware recognition
- Eight cooking functions
- Overheat protection
- Configurable power levels from 200W to 2000W
- Efficient induction heating
- Fast heating and cool down times
- Included carry bag and silicone non-slip cooking mat
- Safety Lock to prevent unintended use

## PRODUCT OVERVIEW

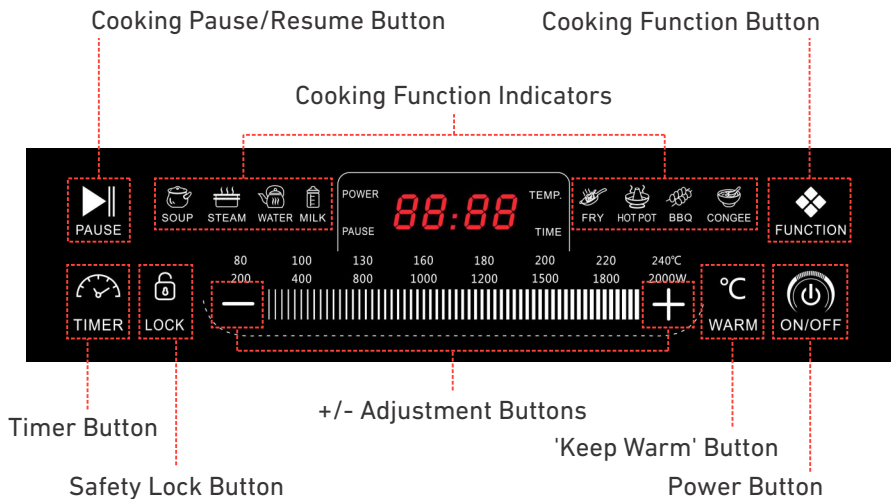

# UNDERSTANDING YOUR COOKTOP



EXHAUST VENT




Caution: The plate is hot after cooking, please don't touch with your hand.

COOKING ZONE

DIGITAL DISPLAY

CONTROL PANEL

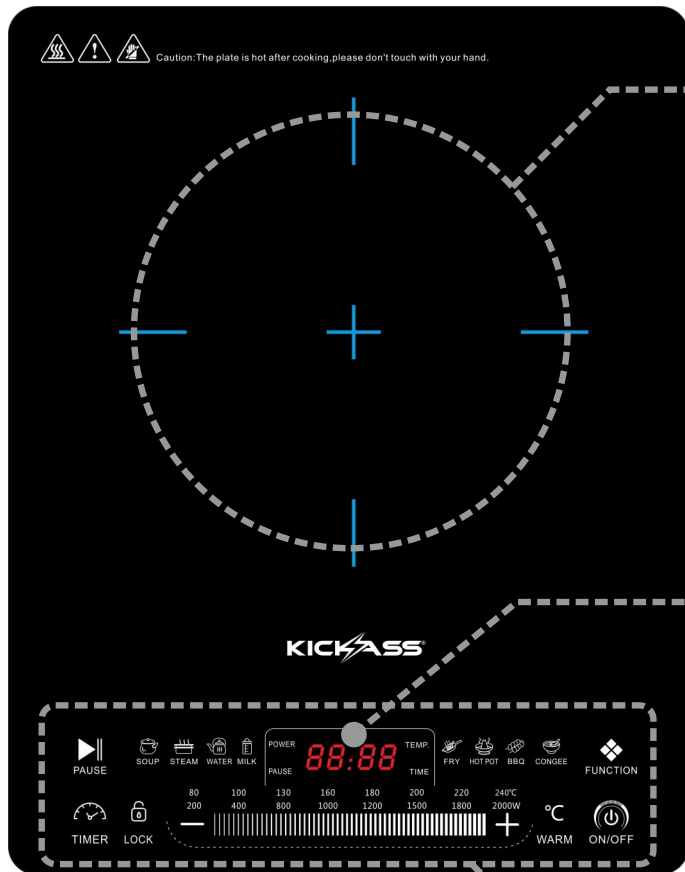

# USING THE INDUCTION COOKTOP

## BEFORE USING:

- Ensure the cooktop is situated on a flat and stable surface to prevent cookware from tilting.
- We recommend using the silicone mat when cooking, as it will prevent cookware from sliding around on the glass – especially if the cooking surface is not level.

## TURNING ON YOUR COOKTOP:

Connect the cooktop to a suitable 240V AC power source. When power is connected the unit display will show ---- on the display to indicate it is in standby mode.


To turn on the cooktop, press the Power Button 

- The display will show 'ON'


To turn off the cooktop, press the Power Button 

- The unit will enter standby mode and the display will show ----.


## BEGIN COOKING:

To start cooking, place induction-compatible cookware in the Cooking Zone and press the Function Button  to select the desired cooking function. Each press of the Function Button will change the selected cooking function.

## PAUSE FUNCTION:

Cooking can be paused by pressing the Pause Button . The cooktop will remain on, but the heating element will de-energize. The Pause Function will also pause the timer if it has been set. To resume cooking, press the Pause Button again. The cooktop will resume heating and the timer will continue from its paused point.

## COOKING TIMER:

- Press the Timer Button . The cooktop display will show 0:00
- Use the '+' and '-' controls to set the desired duration for the timer. A single press will change the time by 1 minute increments. Holding the buttons down will change the time by 10 minute increments.
- Once set (the display will stop flashing), the display will alternate between showing the set power/temperature and the remaining time.
- At the end of the set timer, the cooktop will enter standby mode.


Note: Timer can only be set when using Soup, Fry, Hot Pot and BBQ cooking functions.

## TEMPERATURE AND POWER ADJUSTMENT:

- Use the  and  buttons to adjust the temperature or power while cooking.


Note: Adjustment is only possible when using Soup, Fry, Hot Pot or BBQ Functions.

## WARM FUNCTION:

- Press the Warm Button  on the control panel. The unit will beep and the display will show 80°.
- The unit will maintain 80°C until it is turned off or another cooking function is selected.

## SAFETY LOCK:

To lock the cooktop, long press the lock button  for 3 seconds.

To cancel the lock, long press the lock button  for 3 seconds again.

When the Safety Lock is enabled, all buttons except for the Lock Button will be inactive. Cooking function will continue.”

## COOKING FUNCTIONS:




Soup function is set to 1200W.  
It will change to 800W after 15 minutes.




Steam function is set to 1200W.  
It will change to 800W after 15 minutes.



Water boiling function is set to 2000W.

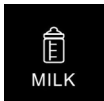


Milk heating function is set to 800W. It will pause heating  
after 20 minutes or if the temperature is detected to be over  
60 degrees.

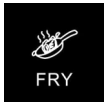

Frying function is set to 240 degrees.



Hot pot function is set to 1200W.

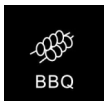

BBQ function is set to 220 degrees.



Congee function is set to 1200W. It will change to  
800W after 15 minutes.

## COMPATIBLE COOKWARE

Induction-compatible cookware includes cookware with a metal base that is magnetic. Examples of this can include:



ENAMEILED IRON POT



IRON SKILLET



IRON PLATE



STAINLESS STEEL POT



IRON PAN



STAINLESS STEEL  
TEA POT



CAST IRON POT

## CLEANING INSTRUCTIONS

- Before cleaning, ensure the cooktop is switched off and disconnected from the power supply.
- Ensure the appliance is completely cool.
- Clean with a damp cloth only.
- Do not use any abrasive cleaners or harsh chemicals.
- Ensure all components are completely dry before storing the unit.

## TROUBLESHOOTING

Error	Description	Action
E0	No cookware detected	Confirm there is an induction-compatible piece of cookware positioned in the cooking zone of the cooktop.
E1	AC input voltage low	Check the AC source that the cooktop is connected to is producing above 100V
E2	AC input voltage high	Check the AC source that the cooktop is connected to is producing no more than 280V.
E3	Overheating or heat sensor error	Allow the unit to cool and test again. If the error continues, contact support.
E4	Heat sensor error	If the error continues, contact support.
E5	Heat sensor error	If the error continues, contact support.

## WARRANTY & SUPPORT INFORMATION

Need help? For product support or to make a warranty claim, reach out to the KickAss Customer Service team on: [warranty@kickassproducts.com.au](mailto:warranty@kickassproducts.com.au)

Alternatively, visit our Customer Support Portal at:  
<https://supportportal.kickassproducts.com.au/>

# KICKASS

KickAss is a registered trademark of  
KickAss Products Pty Ltd

Designed & imported by  
KickAss Products Pty Ltd  
39 Iris Place, Acacia Ridge, QLD 4110  
Australia

Made in China

